


Spectralink Butterfly Quick Guide

Charge your handset 4 hours prior to first use for best performance.

Installing/Replacing Batteries

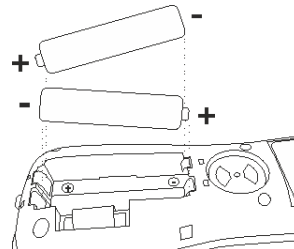

- Remove the battery. Use a paper clip or a wide screwdriver to open on top of the handset.
- Lift off the battery cover.
- Tilt the battery and position it in the battery compartment with the (+) terminal first. Press the battery into place so that the (-) terminal is also connected.



- Press the back cover in locked position. When you hear a click the back cover is in position.

Note: Use only Ni-MH rechargeable batteries.


Turning Handset On/Off

- To turn on the handset, press .
- To turn off the handset, press  until the question Turn off? appears in the display.
- Confirm with "Yes".




Making calls

Off Hook Dialling (Dial Directly)

- Press .
- Dial the extension or external number.



On Hook Dialling (Pre-Dial)

- Dial the extension or external number.
- Press .


Speed Dial Calls

- Press and hold a key (0-9) for three seconds, until the call is initiated.


Answering and Ending Calls

- To answer a call, press .
- To end calls, press .



Call List Calls


- Press (-) on the left side of navigation key to enter Call list.
- Scroll to desired name or number and press .

Call Missed Calls

- Press (+) on the right side of navigation key to enter missed call list.
- Scroll to the desired name or number and press .

Phone Book Calls

- Press  to enter phonebook.
- Scroll to the desired name and press  to dial the number.

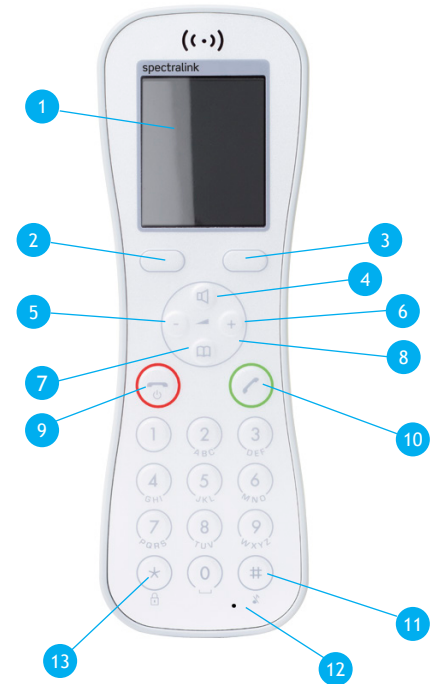

- 1 Display
- 2 Left Softkey
- 3 Right Softkey
- 4 Speakerphone On/Off
- 5 Call List/Volume Control
- 6 Missed Call List/Volume Control
- 7 Phone Book
- 8 Navigation Keys
- 9 On Hooks
- 10 Off Hooks
- 11 Silent Mode
- 12 Microphone
- 13 Keypad Locks

Adjusting Ringing Volume

- Press “Menu” to enter main menu.
- Scroll to “Settings” and press “Select”.
- Scroll to “Ringing volume” and press “Select”.
- Press left (-) or right (+) side of navigation key to adjust the volume.
- Press “Set” to save the settings and then “Back”.

Changing Ringing Tone

- Press “Menu” to enter main menu.
- Scroll to “Settings” and press “Select”.
- Scroll to “Ringing tone” and press “Select”.
- Scroll to desired ringer tone and press “Change” to listen to chosen ringer tone.
- Press “Back”.

Adding a New Contact to Phone Book

- Press “Menu” to enter main menu.
- Scroll to “Phone Book” and press “Select”.
- Scroll to “Add name/number” and press “Select”.
- Type the name of the contact using the keys 2-9.
- Scroll to number and enter the number of the contact (max 24 digits).
- Press “Save” to store name and number.

If the display shows Memory full, it is necessary to delete one or more contacts from phone book.

Assigning Speed Dials

- Press “Menu” to enter main menu
- Scroll to “Phone Book” and press “Select”.
- Scroll to “Find Name” and press “Select”.
- Locate the desired name, and press “Details”.
- If more than one number: Scroll to the desired number and press “Select”.

- Scroll to “Add to speed dial” and press “Select”.
- Scroll to the desired position and press Add name.
- If position is occupied, press Yes to replace existing speed dial.


Adjusting Speaker Volume

- While on a call press (-) or (+) on the navigation key for volume control.

Locking/Unlocking Keypad

- Press “Menu” followed by “*” to lock/unlock keypad.

Exit menus




- Exit menus and return to start screen, press  button.

Silent Mode On/Off

- Press “Menu” followed by “#” to turn the handset silent mode on/off. In silent mode the ringer will be muted and the vibrator activated.

Note: When activating silent mode, the vibrator will spin shortly.








Speakerphone On/Off

- While on a call, press  on the navigation key to enable speakerphone.
- To disable speakerphone, press .
- While idle, press  to hook off and to enable speakerphone.

Microphone Mute On/Off

- While on a call, press “Mic Mute” to turn microphone mute on.
- Press “Mic on” to turn microphone back on.

Handset icons

External incoming calls	
Internal incoming calls	
Missed calls	
Battery charging	
Keypad locked	
Microphone muted	
Silent mode	

Technical Specifications

Speech/Standby Time

Active talking time: Up to 15 hours (20 hours in economy mode).
Standby time: Up to 150 hours.

Temperature

Operating temperature incl. charging:
0-40°C/32-104°F.

©2014-2017 Spectralink Corporation.
All rights reserved.
Specifications subject to change without notice.

Spectralink Corporation
2560 55th Street
Boulder CO 80301, USA

Spectralink Europe ApS
Bygholm Søpark 21 E Stuen
DK-8700 Horsens
Tel. +45 7560 2850

infodk@spectralink.com
www.spectralink.com

Safety and regulatory Instructions



This Spectralink Butterfly Handset has been marked with the CE mark. This mark indicates compliance with EEC Directives 1999/5/EC. A full copy of the Declaration of conformity can be obtained from Spectralink Europe ApS, Bygholm Søpark 21 E Stuen, DK-8700 Horsens.

The WEEE Marking on this equipment indicates that the product must not be disposed of with unsorted waste, but must be collected separately.



Visit www.spectralink.com for further guidance on battery recycling.

Important Safety Instructions



Before using your telephone equipment, you should always follow basic safety instruction to reduce the risk of fire, electrical shock and injury to persons, and damage to property.

1. Read and understand all instructions.
2. Follow all warnings and instructions including those marked on the product.
3. Unplug this product before cleaning. Do not use liquid cleaners or aerosol cleaners. Use damp cloth for cleaning.
4. Do not install the telephone equipment in the bathroom or near a wash bowl, kitchen sink, or laundry tub, in a wet basement, or near a swimming pool.
5. Slots or openings in the equipment are provided for ventilation to protect it from over-heating. These openings must not be blocked or covered.
6. Do not overload wall outlets and extension cords as this can result in fire or electrical shock.
7. Never push objects of any kind into this product through cabinet slots as they may touch dangerous voltage points or short out parts that could result in fire, electrical shock, or injury. Never spill liquid of any kind into this product.
8. To reduce the risk of electrical shock or burns, do not disassemble this product. Opening or removing covers may expose you to dangerous voltages, dangerous electrical current, or other risks. Incorrect reassemble can cause electrical shock when the appliance is subsequently used. If the product need repair, consult your dealer.

9. Refer servicing to qualified service personnel.
10. Avoid using telephone during an electrical storm. There may be a risk of electrical shock from lightning.
11. Do not use the telephone to report a gas leak in the vicinity of the leak.
12. Do not place the base near microwave ovens, radio equipment, or non-ground connected televisions. These appliances may cause electrical interference to the base or handset.
13. This telephone will not operate in the event of a blackout. Please keep a backup phone for emergencies.
14. Installation must be performed in accordance with all relevant national wiring rules.
15. Plug acts as Disconnect Device - The socket outlet to which this apparatus is connected must be installed near the equipment and must always be readily accessible.
16. This device and its antenna must not be co-located or operating in conjunction with any other antenna or transmitter.
17. Warning - The earpiece/mouthpiece region on the handset can attract and retain small metallic objects.

Intrinsic safety

Do not use the handset in conditions where there is a danger of electrically ignited explosions.

Exposure to sunlight, heat and moisture

Do not expose the wireless phone to direct sunlight for long periods. Keep the wireless phone away from excessive heat and moisture.

Spare parts and accessories

Use only approved spare parts and accessories. The operation of non-approved parts cannot be guaranteed and may even cause damage.

Power failure

In the event of a power failure or flat battery, you cannot use the handset to make or receive calls.

Battery Precautions

1. Exercise care in handling batteries in order not to short the batteries with conducting materials such as rings, bracelets, and keys. The batteries or conducting material may overheat and cause burns or fire.
2. Do not open or mutilate the batteries. Released electrolyte is corrosive and may cause damage to the eyes or skin. The electrolyte may be toxic if swallowed.
3. During charging batteries heat up. This is normal and not dangerous.
4. Battery installation Caution - Danger of Explosion if Battery is incorrectly replaced. Replace only with the same or equivalent type recommended by the manufacturer. Dispose of used batteries according to the manufacturer's instructions.

Notices

Before installing this equipment, users should ensure that it is permissible to be connected to the facilities of the local telecommunications company. The equipment must also be installed using an acceptable method of connection. The customer should be aware that compliance with the above conditions may not prevent degradation of service in some situations.

Repairs to certified equipment should be coordinated by a representative designated by the supplier. Any repairs or alterations made by the user to this equipment, or equipment malfunctions, may give the telecommunications company cause to request the user to disconnect the equipment.

Users should ensure for their own protection that the electrical ground connections of the power utility, telephone lines and internal metallic water pipe system, if present, are connected together. This precaution may be particularly important in rural areas.

EMC Cautions

Users should not attempt to make such connections themselves, but should contact the appropriate electric inspection authority, or electrician, as appropriate.

If your telephone equipment causes harm to the telephone network, the telephone company may ask you to disconnect the system from the line until the problem has been corrected or they may discontinue your service temporarily. If possible, they will notify you in advance, But if advance notice is not practical, you should be notified as soon as possible. You will be informed of your right to file a complaint with the FCC.

Your telephone company may make changes in its facilities, equipment, operations, or procedures that could affect the proper functioning of your telephone system, If they do and it is possible, you will be notified in advance to give you an opportunity to maintain uninterrupted telephone service. If you experience trouble with this telephone system, disconnect it from the network until the problem has been corrected or until you are sure that the equipment is not malfunctioning.

Note: This equipment has been tested and found to comply with the limits for a class B digital device, pursuant to local regulations. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

FCC Note

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. FCC ID: M72-PK BK001.

SAR

Device has been tested for SAR compliance for head and body worn configurations. The highest reported SAR values are: head 0.00981 W/kg and body worn 0.020 W/kg.

IC Note

Operation is subject to the following two conditions: (1) This device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.

The Term "IC": before the certification/ registration number only signifies that the Industry Canada technical specifications were met.

Privacy of communications may not be ensured when using this telephone. IC number: 1849C-PK BK001.

Power Outage

In the event of a power outage, your wireless telephone will not operate. The wireless telephone requires electricity for operation. You should have a telephone which does not require electricity available for use during power outages.

Information to user

The users manual or instruction manual for an intentional or unintentional radiator shall caution the user that changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.