

**Spectralink 87-Series**  
PIVOT Combo Quad Charger



**Charging Instructions**

The Battery Packs slide into the individual charging slots. The LED beside the charging slot indicates the charging status of the Battery Pack. The following table lists the LED indications and a discharged Battery Pack will take approximately 3 hours to fully charge.

LED Indication	Battery Pack Status
Solid red	Charging
Solid green	Fully charged
Off	Not properly seated or empty
Blinking red	High temperature or error

*If there is an error and the LED is blinking red, the LED will continue to blink red— even when you remove the Battery Pack—until a Battery Pack without error is placed in the slot. Power cycling the unit will also clear the flashing LED.*

**CAUTION: OVERHEATED BATTERY PACKS**

IF AN OVERHEATED BATTERY PACK IS DETECTED CHARGING WILL SUSPEND AND THE LED WILL BLINK RED. REMOVE THE BATTERY PACK AND LET IT COOL BEFORE ATTEMPTING TO CHARGE IT AGAIN.

**Chargers and Battery Packs**

The PIVOT Combo Quad Charger is designed to charge Spectralink 87-Series Battery Pack models DM351 and DM367. These battery packs contain a lithium ion battery that is subject to certain usage characteristics as detailed below. Be sure to follow battery handling guidelines to ensure safe use and a long battery life.

- Chargers operate in a 50° to 86° F (10° to 30°C) environment. Do not expose them to freezing temperatures or direct sunlight.
- Do not place anything in the charging bay other than a single Battery Pack as appropriate to avoid bending the contacts. Bent contacts can keep the Battery Pack from charging.
- Only use genuine Spectralink 87-Series Battery Packs with PIVOT Combo Quad Chargers.
- Never use a non-genuine charging unit as it could damage the Battery Pack.
- Use only the original plug-in power adapter for the chargers.
- Contact your service representative for assistance if you have a faulty Battery Pack or a problem with your charger.
- Any battery that exhibits swelling, cracking or other abnormality should be disposed of promptly and properly.

**Contact Information**

**Spectralink Corporation**

**US Location**  
800-775-5330  
2560 55th Street  
Boulder, CO 80301  
[info@spectralink.com](mailto:info@spectralink.com)

**European Location**  
+45 7560 2850  
Spectralink Europe ApS  
Langmarksvej 34  
8700 Horsens  
[infodk@spectralink.com](mailto:infodk@spectralink.com)

**Copyright Notice**

© 2014-2015 Spectralink Corporation All rights reserved. Spectralink™, the Spectralink logo and the names and marks associated with Spectralink's products are trademarks and/or service marks of Spectralink Corporation and are common law marks in the United States and various other countries. All other trademarks are property of their respective owners. No portion hereof may be reproduced or transmitted in any form or by any means, for any purpose other than the recipient's personal use, without the express written permission of Spectralink.

All rights reserved under the International and pan-American Copyright Conventions. No part of this manual, or the software described herein, may be reproduced or transmitted in any form or by any means, or translated into another language or format, in whole or in part, without the express written permission of Spectralink Corporation.

Do not remove (or allow any third party to remove) any product identification, copyright or other notices.

**Notice**

Spectralink Corporation has prepared this document for use by Spectralink personnel and customers. The drawings and specifications contained herein are the property of Spectralink and shall be neither reproduced in whole or in part without the prior written approval of Spectralink, nor be implied to grant any license to make, use, or sell equipment manufactured in accordance herewith.

Spectralink reserves the right to make changes in specifications and other information contained in this document without prior notice, and the reader should in all cases consult Spectralink to determine whether any such changes have been made.

NO REPRESENTATION OR OTHER AFFIRMATION OF FACT CONTAINED IN THIS DOCUMENT INCLUDING BUT NOT LIMITED TO STATEMENTS REGARDING CAPACITY, RESPONSE-TIME PERFORMANCE, SUITABILITY FOR USE, OR PERFORMANCE OF PRODUCTS DESCRIBED HEREIN SHALL BE DEEMED TO BE A WARRANTY BY SPECTRALINK FOR ANY PURPOSE, OR GIVE RISE TO ANY LIABILITY OF SPECTRALINK WHATSOEVER.

**Important Warnings**


**WARNING: DO NOT...**  
DO NOT IMMERSER THE BATTERY PACK IN WATER OR THROW IT INTO A FIRE.

**WARNING: DO NOT...**  
DO NOT DISPOSE OF THE BATTERY PACK WITH YOUR DOMESTIC WASTE. TAKE USED BATTERY PACKS TO AN APPROPRIATE COLLECTION POINT FOR RECYCLING OR SEND THEM BACK TO YOUR SUPPLIER OR SERVICING AGENT.

**WARNING: DO NOT...**  
ALL BATTERIES CAN CAUSE PROPERTY DAMAGE AND/OR BODILY INJURY, SUCH AS BURNS, IF A CONDUCTIVE MATERIAL SUCH AS JEWELRY, KEYS, OR BEADED CHAINS TOUCHES EXPOSED TERMINALS. THE CONDUCTIVE MATERIAL MAY COMPLETE AN ELECTRICAL CIRCUIT (SHORT CIRCUIT) AND BECOME QUITE HOT. EXERCISE CARE IN HANDLING ANY CHARGED BATTERY, PARTICULARLY WHEN PLACING IT INSIDE A POCKET, PURSE, OR OTHER CONTAINER WITH METAL OBJECTS.

**WARNING: THE BATTERY USED IN THIS DEVICE MAY PRESENT A RISK OF FIRE OR EXPLOSION. USE THIS CHARGER TO CHARGE SPECTRALINK BATTERY PACK MODELS ONLY. CHARGING ANOTHER MODEL BATTERY PRESENTS A RISK OF FIRE OR EXPLOSION.**

**WARNING: EXPLOSION RISK**  
THE BATTERY PACK WITH AN INCORRECT TYPE, ONLY USE SPECTRALINK MODEL DM351 OR DM367 BATTERY PACKS WITH SPECTRALINK 87-SERIES WIRELESS HANDSETS. DISPOSE OF USED BATTERIES ACCORDING TO THE INSTRUCTIONS.

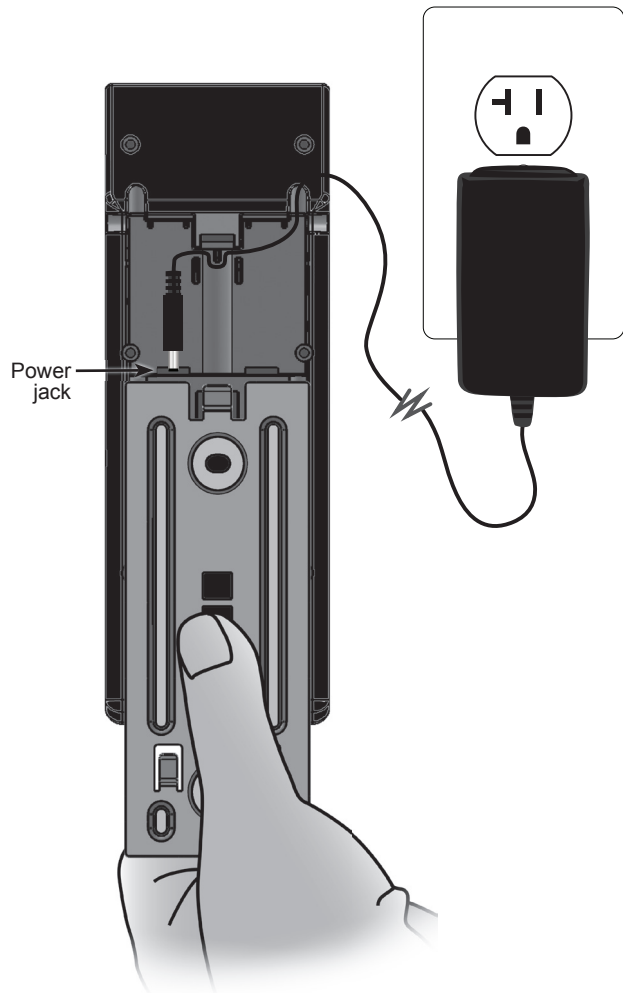

**Electromagnetic Interference and Compatibility**

**NOTE: ELECTROMAGNETIC INTERFERENCE**  
NEARLY EVERY ELECTRONIC DEVICE IS SUSCEPTIBLE TO ELECTROMAGNETIC INTERFERENCE (EMI) IF INADEQUATELY SHIELDED, DESIGNED, OR OTHERWISE CONFIGURED FOR ELECTROMAGNETIC COMPATIBILITY.

**Facilities**

To avoid electromagnetic interference and/or compatibility conflicts, turn off your handset in any area where posted notices instruct you to do so. Hospitals or health care facilities may be using equipment in certain areas that is sensitive to external RF energy.

**Potentially Explosive Atmospheres**  
Do not take your handset, charger, or battery into any area with a potentially explosive atmosphere. Do not remove, install, or charge batteries in such areas. Sparks in a potentially explosive atmosphere can cause an explosion or fire resulting in bodily injury or even death.



**NOTE: TYPES OF EXPLOSIVE ATMOSPHERES**  
AREAS WITH POTENTIALLY EXPLOSIVE ATMOSPHERES INCLUDE FUELING AREAS SUCH AS BELOW DECKS ON BOATS, FUEL OR CHEMICAL TRANSFER OR STORAGE FACILITIES, AREAS WHERE THE AIR CONTAINS CHEMICALS OR PARTICLES SUCH AS GRAIN, DUST, OR METAL POWDERS, AND ANY OTHER AREA WHERE YOU WOULD NORMALLY BE ADVISED TO TURN OFF YOUR VEHICLE ENGINE. AREAS WITH POTENTIALLY EXPLOSIVE ATMOSPHERES ARE OFTEN POSTED, BUT NOT ALWAYS.

**Introduction to the PIVOT Combo Quad Charger**

The PIVOT Combo Quad Charger is designed to charge four Spectralink 87-Series Battery Packs (DM351 or DM367) at the same time. Either type of Battery Pack works in any slot. It can be used as a standalone desk charger or mounted on a wall either singly or in a series. Unpack the Combo Quad Charger and remove the mounting plate.

**Desktop Use**



1. Plug the power cord into one of the jacks on the bottom of the charger. Either jack will work.
2. Use the plastic ribs for strain relief and thread the cord through the opposite side top or side channel.
3. Slide the mounting plate into place as shown in the drawing. It will lock onto the bottom of the Quad Charger.
4. Affix a rubber foot at each corner of the mounting plate.
5. Plug in the Quad Charger. It is now ready for use.
6. Place a Battery Pack into each slot as shown in the drawing on the front cover.

**Wall Mounting**

Refer to the instructions on the reverse side.

## Mounting the PIVOT Combo Quad Chargers in Series

The PIVOT Combo Quad Charger can charge up to four Battery Packs at the same time. Up to three Quad Chargers can be connected in a daisy chain series to increase charging capacity to 12 bays. The daisy chain kit contains three Quad Chargers, two 19 cm cables for vertical mounting, two 8 cm cables for horizontal mounting and an enhanced power supply.

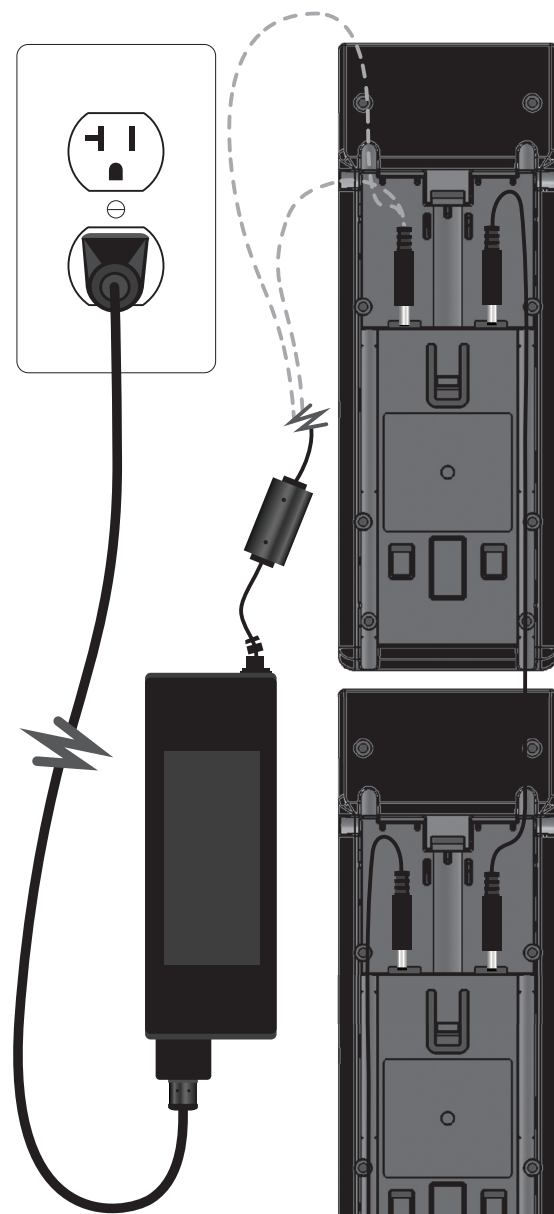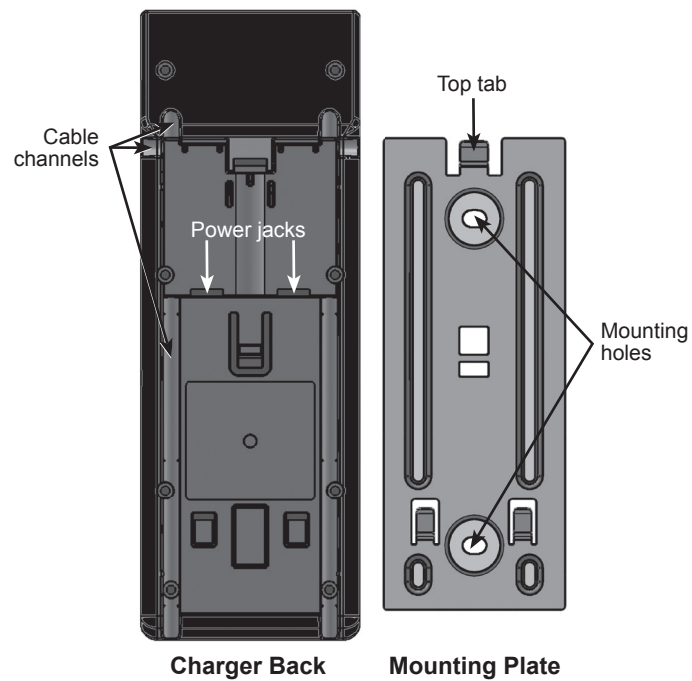

### Vertical Configuration

In a vertical configuration, the top charger slides under the bottom charger and therefore the bottom charger should be the first one that is mounted on the plate, then the middle one, then the top one. Use the 19 cm cables for vertical configuration.

1. Mount all three plates in a vertical line 1.75 inches (45 mm) apart. Note that the tab should be at the top.
2. Plug the power cord into the outside jack of the first charger and thread the wire through a channel on that side.
3. Plug a 19 cm cable into the second jack and thread the cable through the top channel. Ensure that the cables are secured.
4. Mount the bottom charger by sliding it from the top down onto the plate until it snaps into place.
5. Pick up the second /middle charger and plug the bottom charger's cable into the jack on the same side as it is in the bottom charger. Secure the cable in the channel on that side.
6. Plug the second 19 cm cable into the other jack and thread it through the top channel.
7. Mount the middle charger.
8. Plug the cable into the third or top charger and secure it in the channel as you did for the middle charger.
9. Mount the third charger.
10. Plug in the power supply.

### Horizontal Configuration

In a horizontal configuration, the chargers are side-by-side. Be sure to leave enough room between the chargers so that it is easy to insert and remove the batteries.

1. Mount all three plates in a horizontal line 1.5 inches (38 mm) apart. Note that the tab should be at the top.
2. Plug the power cord into the outside jack of the first charger and thread the wire through a channel on that side.
3. Plug a 8 cm cable into the second jack and thread the cable through the top channel.
4. Mount the first charger by sliding it from the top down onto the plate until it snaps into place.
5. Pick up the second charger and thread the first charger's cable through the top channel and plug it into the jack on that side.
6. Plug the second 8 cm cable into the other jack and thread it through the top channel.
7. Mount the middle charger.
8. Thread the middle charger's cable through the top channel of the last charger and plug it into the jack on that side.
9. Mount the third charger.
10. Plug in the power supply.



#### CAUTION: POWER SUPPLIES

USE THE POWER SUPPLY THAT COMES IN THE DAISY CHAIN KIT WHEN YOU MOUNT THE CHARGERS IN A SERIES. THE POWER SUPPLY FOR INDIVIDUAL CHARGERS WILL NOT SUPPORT THE LOAD AND SHOULD NOT BE USED IN A SERIES CONFIGURATION.



#### CAUTION: INSTALLATION RESTRICTIONS

DO NOT MOUNT THE CHARGER WHERE IT WILL EXPOSE CHARGERS, BATTERY PACKS OR HANDSETS TO POTENTIALLY EXPLOSIVE ATMOSPHERES OR EXPOSE PERSONNEL OR EQUIPMENT TO INAPPROPRIATE ELECTROMAGNETIC INTERFERENCE.

#### Options for power supply

The brick-style power supply is required for the series configuration. The power cord can be plugged into either jack on either end and the cable can be routed through any of the cable channels.

The dashed lines on the illustrations show the various options.

*Three Chargers in a Vertical Configuration*

