


Wireless Telephone Quick Reference Guide

Fujitsu F9600

DT14DS

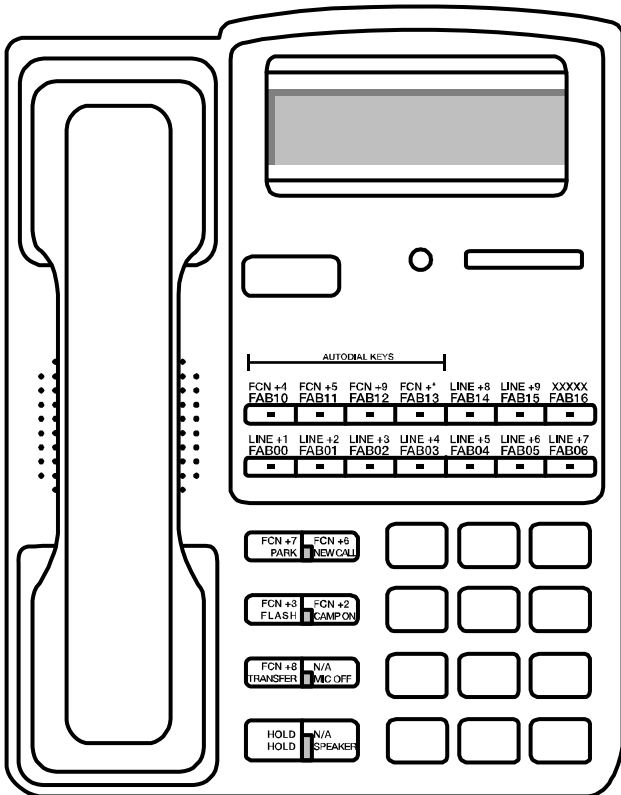


DT14DS

The diagram above shows how the DT14DS keypad corresponds to the Wireless Telephone.

Pressing **LINE** followed by a digit (1-8) on the Wireless Telephone is equivalent to pressing one of the Feature Access buttons on the DT14DS. **LINE + 1** is reserved as the prime line appearance and **LINE + 9** is reserved for message waiting and cannot be used for any other feature.

FCN 4, 5, 9 and * on the Wireless Telephone can be programmed for autodial capabilities.

Function Key Strokes	Default Settings	Fill In Your Feature Settings
FCN + 1	MUTE	
FCN + 2	CAMP ON	
FCN + 3	FLASH	
FCN + 4	(AutoDial)	
FCN + 5	(AutoDial)	
FCN + 6	NEW CALL	
FCN + 7	PARK	
FCN + 8	XFER	
FCN + 9	(AutoDial)	
FCN + *	(AutoDial)	
FCN + #	EXIT MENUS	

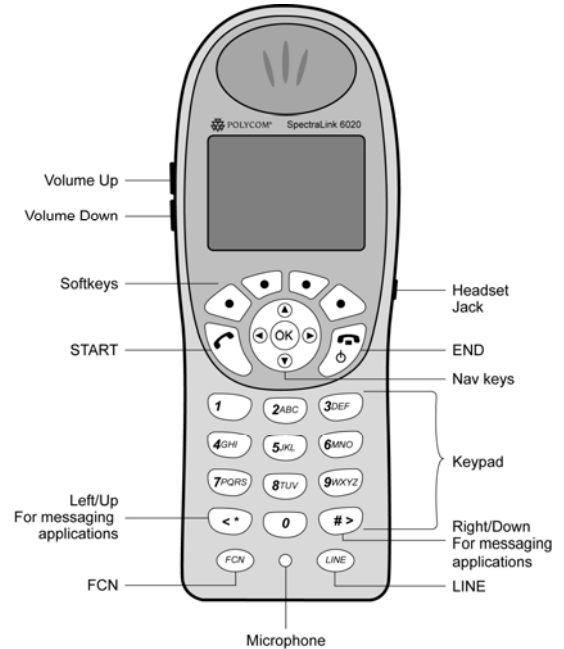

SpectraLink 6020 Wireless Telephone

On/Off Press and hold **END**. Two chirps on, one chirp off

Make a call Press **START** to get dial tone.

Hang up Press **END**. Be sure to do this at the end of each call.

Answer call Press **START**. Line indicator comes on steady when the call is answered.

Answer second call Press **HOLD** to put your current call on hold, or **END** to hang up. Press **LINE** + the digit that is flashing.

Hold Press **HOLD**

Take off Hold Press **LINE** followed by the digit for the line on hold, which will be flashing.

Mute On/Off Press the **MUTE** softkey.

Function Pressing **FCN** while off hook allows you to scroll through menu screens.

User Options Press the **CFG** softkey while on hook to change handset settings.

For information on Battery Pack charging and setting user preferences, see the Wireless Telephone User Guide.



For technical support, please contact your facility's Network Administrator.