

Associate Display Phone

The diagram above shows how the Associate Display Phone keys correspond to the Wireless Telephone.


Pressing **LINE** followed by a digit (1-9) on the Wireless Telephone is equivalent to pressing one of the line keys on the Associate station set.

Pressing **FCN** followed by a digit (2-9) on the Wireless Telephone is equivalent to pressing one of the feature buttons on the Digital Keyset. **FCN + #** is equivalent to using the Special Key.

LINE + # increases your volume level on the Wireless Telephone, and **LINE + *** decreases your volume.

Function Key Strokes	Default Settings	Fill In Your Feature Settings
FCN + 1	MUTE	
FCN + 2	FWD	
FCN + 3		
FCN + 4		
FCN + 5	CNF	
FCN + 6	MSG	
FCN + 7	REDL	
FCN + 8	TRANS	
FCN + 9	SYSPD	
FCN + #	SPCL	
FCN + *	(Exits menus)	

Wireless Telephone Quick Reference Guide Inter-Tel Eclipse Associate Display Phone

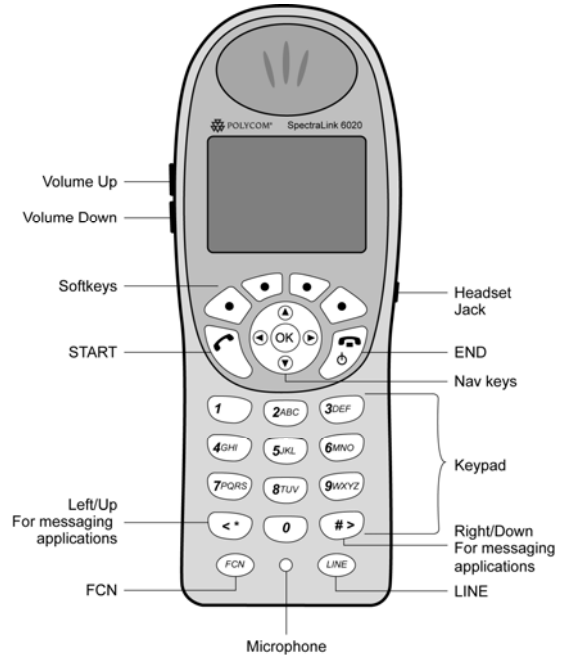

SpectraLink 6020 Wireless Telephone

- On/Off** Press and hold **END**. Two chirps on, one chirp off
- Make a call** Press **START** to get dial tone.
- Hang up** Press **END**. Be sure to do this at the end of each call.
- Answer call** Press **START**. Line indicator comes on steady when the call is answered.
- Answer second call** Press **HOLD** to put your current call on hold, or **END** to hang up. Press **LINE +** the digit that is flashing.
- Hold** Press **HOLD**
- Take off Hold** Press **LINE** followed by the digit for the line on hold, which will be flashing.
- Mute On/Off** Press the **MUTE** softkey.
- Function** Pressing **FCN** while off hook allows you to scroll through menu screens.
- User Options** Press the **CFG** softkey while on hook to change handset settings.

For information on Battery Pack charging and setting user preferences, see the Wireless Telephone User Guide.

