


Wireless Telephone Quick Reference Guide

Inter-Tel Axxess/Axxent Standard Digital Keyset

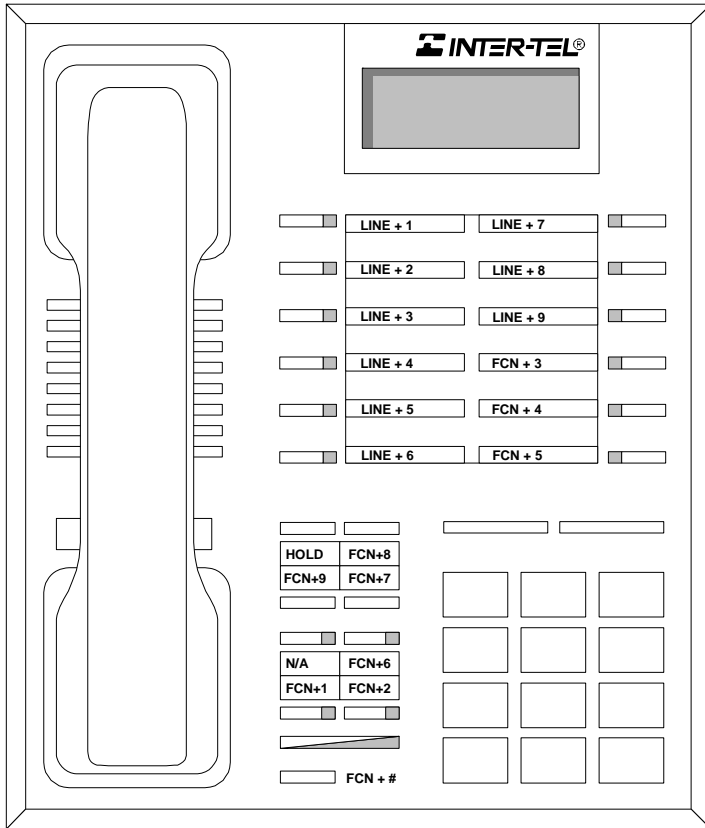


Standard Digital Keyset

Pressing **LINE** followed by a digit (1-9) on the Wireless Telephone is equivalent to pressing one of the line keys on the Standard Digital Keyset.

Pressing **FCN** followed by a digit (2-9) on the Wireless Telephone is equivalent to pressing one of the feature buttons on the Digital Keyset. **FCN + #** is equivalent to using the Special Key.

Function Key Strokes	Default Settings	Fill In Your Feature Settings
FCN + 1	MUTE	
FCN + 2	FWD	
FCN + 3		
FCN + 4		
FCN + 5	CNF	
FCN + 6	MSG	
FCN + 7	REDL	
FCN + 8	TRANS	
FCN + 9	SYSPD	
FCN + #	SPCL	
FCN + *	EXIT MENUS	

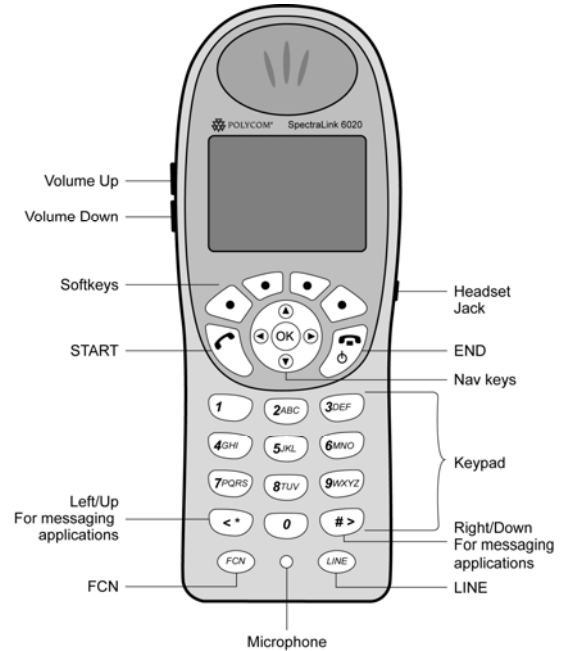

SpectraLink 6020 Wireless Telephone

- On/Off** Press and hold **END**. Two chirps on, one chirp off
- Make a call** Press **START** to get dial tone.
- Hang up** Press **END**. Be sure to do this at the end of each call.
- Answer call** Press **START**. Line indicator comes on steady when the call is answered.
- Answer second call** Press **HOLD** to put your current call on hold, or **END** to hang up. Press **LINE** + the digit that is flashing.
- Hold** Press **HOLD**
- Take off Hold** Press **LINE** followed by the digit for the line on hold, which will be flashing.
- Mute On/Off** Press the **MUTE** softkey.
- Function** Pressing **FCN** while off hook allows you to scroll through menu screens.
- User Options** Press the **CFG** softkey while on hook to change handset settings.

For information on Battery Pack charging and setting user preferences, see the Wireless Telephone User Guide.



For technical support, please contact your facility's Network Administrator.