

Norstar M7310 Station Set

Pressing **LINE** followed by a digit (**1-9**) on the Wireless Telephone is equivalent to pressing one of the 9 line keys on the M7310.

Pressing **FCN** followed by a digit (**2-9**) on the SpectraLink Wireless Telephone is equivalent to pressing one of the memory buttons on the top of the M7310 set. **FCN 1** is reserved for **MUTE**.

Memory buttons 10-12 on the M7310 cannot be accessed from the SpectraLink wireless telephone.


FCN followed by **0**, ***** and **#**, is equivalent to pressing one of the three soft keys just below your display.

Pressing **LINE *** gives you access to your Feature programming. **LINE 0** allows you to release the phone call.

Function Key Strokes	Default Settings	Fill In Your Feature Settings
FCN + 1	MUTE	
FCN + 2	XFER	
FCN + 3	CONF	
FCN + 4	LAST NO	
FCN + 5	FWD	
FCN + 6	SPEED	
FCN + 7	PICK	
FCN + 8	PAGE	
FCN + 9	EXIT MENUS	
FCN + *		
FCN + 0		
FCN + #		
LINE + 0	RLS	
LINE + *	FEATURE	

Wireless Telephone Quick Reference Guide

Nortel Norstar ICS or BCM M7310 Station Set

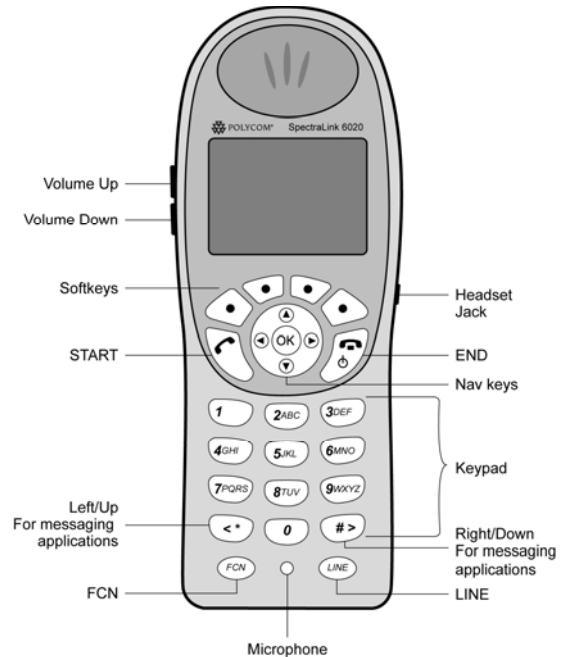

SpectraLink 6020 Wireless Telephone

- On/Off** Press and hold **END**. Two chirps on, one chirp off
- Make a call** Press **START** to get dial tone.
- Hang up** Press **END**. Be sure to do this at the end of each call.
- Answer call** Press **START**. Line indicator comes on steady when the call is answered.
- Answer second call** Press **HOLD** to put your current call on hold, or **END** to hang up. Press **LINE** + the digit that is flashing.
- Hold** Press **HOLD**
- Take off Hold** Press **LINE** followed by the digit for the line on hold, which will be flashing.
- Mute On/Off** Press the **MUTE** softkey.
- Function** Pressing **FCN** while off hook allows you to scroll through menu screens.
- User Options** Press the **CFG** softkey while on hook to change handset settings.

For information on Battery Pack charging and setting user preferences, see the Wireless Telephone User Guide.

