



Wireless Telephone Quick Reference Guide

Panasonic DBS

VB-44223

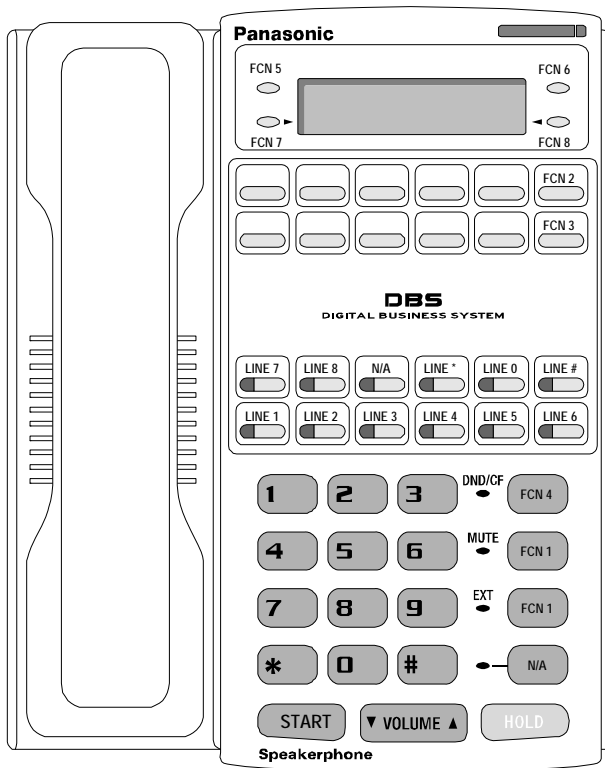

VB-44223

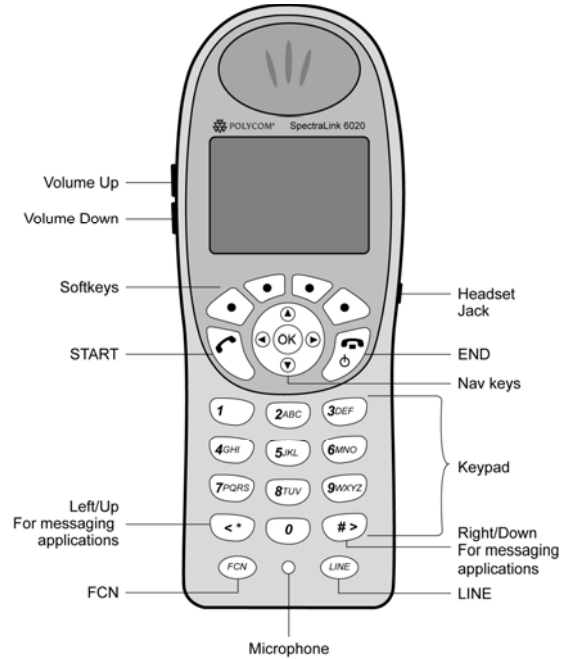

SpectraLink 6020 Wireless Telephone

The figure above shows the mapping of the VB-44223 display set to the SpectraLink Wireless Telephone

FCN followed by a digit (2-8) on the Wireless Telephone is equivalent to pressing one of the feature keys on the VB-44223 desk set. **FCN** followed by **9** allows you to exit the Wireless Telephone function menu.

Pressing **LINE** followed by a digit (0-9, *, #) on the Wireless Telephone is equivalent to pressing one of the Flexible Feature keys on the VB-44223 as shown above.

| Function Key Strokes | Default settings | Fill In Your Feature Settings |
|----------------------|------------------|-------------------------------|
| FCN + 1 | MUTE | |
| FCN + 2 | PROG | |
| FCN + 3 | CONF | |
| FCN + 4 | REDIAL | |
| FCN + 5 | MODE | |
| FCN + 6 | END | |
| FCN + 7 | → | |
| FCN + 8 | ← | |
| FCN + 9 | EXIT FCN MENU | |
| FCN + # | | |
| FCN + * | AUTO | |

On/Off Press and hold **END**. Two chirps on, one chirp off

Make a call Press **START** to get dial tone.

Hang up Press **END**. Be sure to do this at the end of each call.

Answer call Press **START**. Line indicator comes on steady when the call is answered.

Answer second call Press **HOLD** to put your current call on hold, or **END** to hang up. Press **LINE** + the digit that is flashing.

Hold Press **HOLD**

Take off Hold Press **LINE** followed by the digit for the line on hold, which will be flashing.

Mute On/Off Press the **MUTE** softkey.

Function Pressing **FCN** while off hook allows you to scroll through menu screens.

User Options Press the **CFG** softkey while on hook to change handset settings.

For information on Battery Pack charging and setting user preferences, see the Wireless Telephone User Guide.

