

optiset E Standard

The **FCN** and **LINE** labels represent the key sequence on the Wireless Telephone mapped to the corresponding key on the optiset E.

Pressing **LINE** followed by a digit (**1-4**) on the Wireless Telephone is equivalent to pressing one of the programmable line keys on the optiset E Basic.


Pressing **FCN** followed by a digit (**2-8**) on the Wireless Telephone is equivalent to pressing one of the feature keys on the optiset E Standard desk set. FCN followed by 9 allows you to exit the Wireless Telephone function menu.

The **MSG** icon lights on the Wireless Telephone when there is voice mail.

Toggle between the two display views in order to see all 24 possible characters per line sent by the Hicom CS by pressing **LINE + #** and **LINE + ***. Use the arrow icons on the display to determine which key to press.

Function Key Strokes	Default Settings	Fill In Your Feature Settings
FCN + 1	MUTE	
FCN + 2	(Voice Mail)	
FCN + 3		
FCN + 4		
FCN + 5		
FCN + 6		
FCN + 7		
FCN + 8		
FCN + 9	(Exit menus)	
FCN + 0	SELECT	
FCN + *	PREVIOUS	
FCN + #	NEXT	

Wireless Telephone Quick Reference Guide Siemens Hicom 300 optiset E Standard

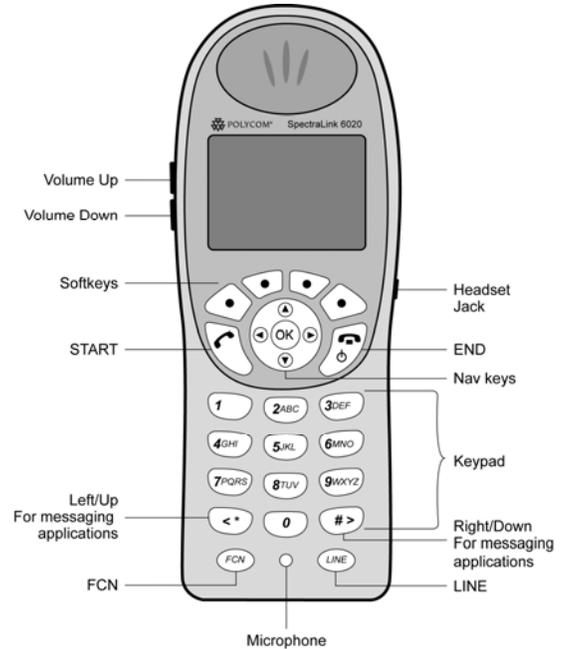

SpectraLink 6020 Wireless Telephone

- On/Off** Press and hold **END**. Two chirps on, one chirp off
- Make a call** Press **START** to get dial tone.
- Hang up** Press **END**. Be sure to do this at the end of each call.
- Answer call** Press **START**. Line indicator comes on steady when the call is answered.
- Answer second call** Press **HOLD** to put your current call on hold, or **END** to hang up. Press **LINE** + the digit that is flashing.
- Hold** Press **HOLD**
- Take off Hold** Press **LINE** followed by the digit for the line on hold, which will be flashing.
- Mute On/Off** Press the **MUTE** softkey.
- Function** Pressing **FCN** while off hook allows you to scroll through menu screens.
- User Options** Press the **CFG** softkey while on hook to change handset settings.

For information on Battery Pack charging and setting user preferences, see the Wireless Telephone User Guide.

