


Wireless Telephone Quick Reference Guide

Siemens ROLM PBX System

ROLMPhone 400

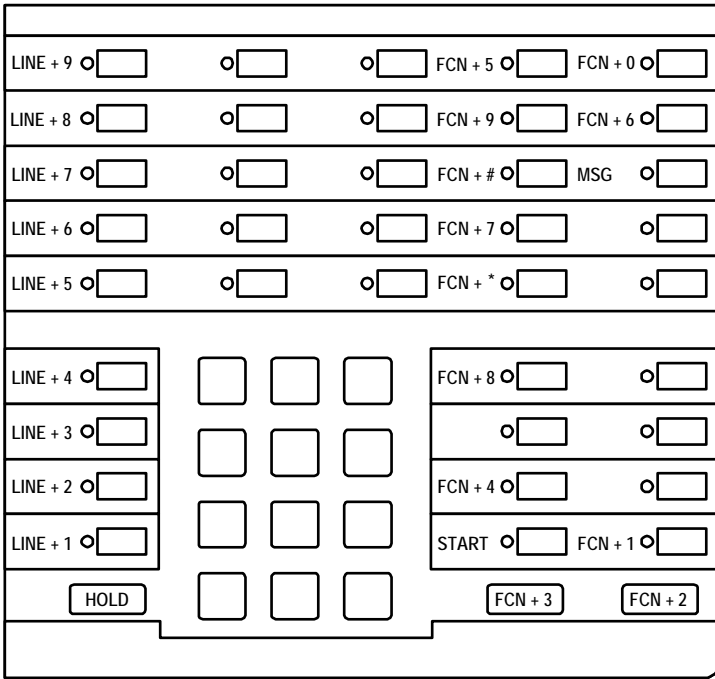


ROLMPhone Keypad

Pressing **LINE** followed by a digit (1-9) on the Wireless Telephone is equivalent to pressing one of the line keys on the ROLMPhone 400.

Pressing **FCN** followed by a digit (0-9) on the Wireless Telephone is equivalent to using one of the desk set feature buttons (see table on right).

The **MSG** icon lights on the Wireless Telephone when there is voice mail.

Function Key Strokes	Default settings	Fill In Your Feature Settings
FCN + 1	MUTE	
FCN + 2	XFER	
FCN + 3	CONN	
FCN + 4	CONF	
FCN + 5	FWD	
FCN + 6	SV RPT	
FCN + 7	PICK	
FCN + 8	CAMP	
FCN + 9	EXIT MENUS	
FCN + #	STA SP	

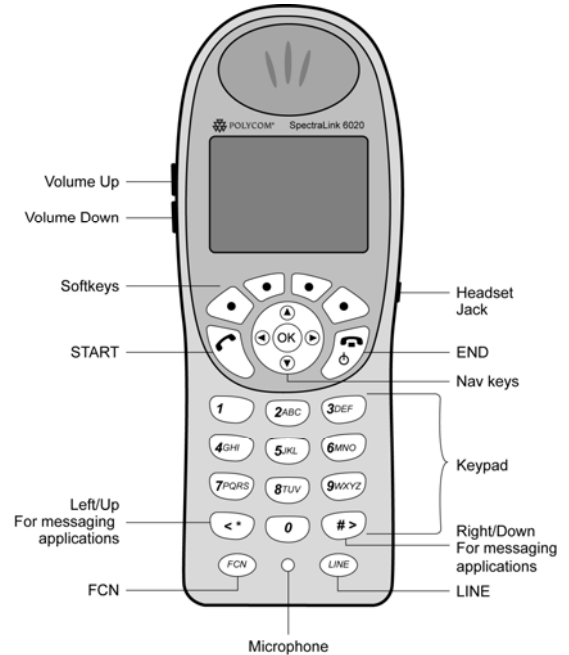

SpectraLink 6020 Wireless Telephone

- On/Off** Press and hold **END**. Two chirps on, one chirp off
- Make a call** Press **START** to get dial tone.
- Hang up** Press **END**. Be sure to do this at the end of each call.
- Answer call** Press **START**. Line indicator comes on steady when the call is answered.
- Answer second call** Press **HOLD** to put your current call on hold, or **END** to hang up. Press **LINE** + the digit that is flashing.
- Hold** Press **HOLD**
- Take off Hold** Press **LINE** followed by the digit for the line on hold, which will be flashing.
- Mute On/Off** Press the **MUTE** softkey.
- Function** Pressing **FCN** while off hook allows you to scroll through menu screens.
- User Options** Press the **CFG** softkey while on hook to change handset settings.

For information on Battery Pack charging and setting user preferences, see the Wireless Telephone User Guide.

